JOHN JOHN JOHN JOHN

johngeorge.co.uk sales@johngeorge.co.uk

Weep Vent

Used for draining lintels, cavity trays and to ventilate cavity walls.


The vent has a baffled grill to help reduce the ingress of driving rain and wind while incorporating an insect grill and drip lip.


Specifically sized to prohibit large insects gaining access but wide enough not to be blocked by debris, paint or water droplets.


The weep vent can be extended for use in wider than 100mm mortar beds by simply placing two vents in line back to back.

 
Installation

- 1. Should be simply fitted in open perp joints and mortared in position.
- 2. When used with a catchment tray, the weep vent should be placed in the furthest corner away from the finished roof line.
- 3. The weep vent should be spaced at no greater than 900mm centres but to meet HNBC guidelines "weep holes are recommended to be sited at every 450mm maximum with at least two per opening above all windows and doors".
- 4. To extend the weep vent, place two vents (open end to open end) together and seal the joint with sealing tape, after first removing the drip lip from one weep vent (see figure 1).
- 5. The weep vent can also be extended by combining with a peep weep vent see the Peep Weep Vent Product Information Sheet.

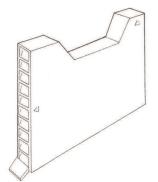

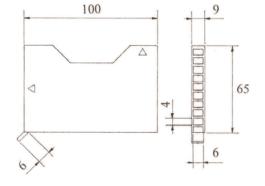

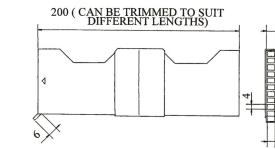








65


Wholesale distributors to merchants in the building, roofing, fencing and agricultural trades

Product Information





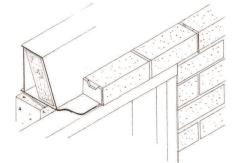

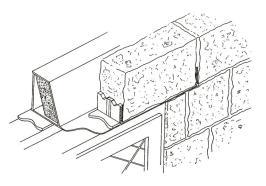

EAST: Tel: 01268 663130 Fax: 01268 663131